

CAR TFT LCD COLOR MONITOR SYSTEM



9.2 inch



15 inch

DVD
VIDEO
CAR MONITOR

ROOF MOUNTING TFT LCD WITH DVD PLAYER



DVD
VIDEO
CAR MONITOR



Make sure to read instruction before using.

Precautions

- 1.To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Do not try to repair the unit by yourself. Please power off immediately incase of any problems and then inform our factory or nearest dealers. The product is comprised of many precision electronic components. Self-renovation or disassembling may cause malfunction to the device.**
- 2.Do not expose this product to moisture, dust, vapor, oil smog, direct sun shine or influential environment.**
- 3.Do not use the diluents or other chemical detergents. Use soft cloth to remove dust or dirt on the unit.**
- 4.Keep the unit away from the over heat or over cold locations. the unit's storage temperature ranges from -30℃--70℃,and its operation temperature ranges from -10℃--55℃.**
- 5.Do not play incompatible discs. This unit can play DVD/VCD/CD/MP3 & CD-R discs.**
- 6.Avoid dropping or impact to the unit.**
- 7.For your safty, do not turn on, watch or operate the unit while driving. In some countries and regions, it may be against the laws.**
- 8.Safe power supply: DC 12V (10V-14V).**

Note

LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicate defects or faults.

Contents

Precautions	1
Contents	2
Disc explanation	3
Disc information	4
Functions and features	4
Connections	5
Basic operation explanations	5
Remote control	6
Assembly of remote control battery	7
Disc operation explanations	7
Operations with DVD	15
Troubles shooting	27
Guarantee card	

• Note •

Design and specifications are subject to change without notice.

Choosing guide for disc

DVDdisc and DVD player both have own world region code, DVD player only play the correspondng DVD disc with same code.

Enclosed are DVD disc code sheet:

Region code	Country or region	Country or region
1		U.S.A.,Canada
2		Europe,Japan,middle East, South Africa
3		West Asia(Includes Korea, HK and TaiWan), Southeast Asia
4		Australia, Kinneret, Mexico, New Zealand
5		Africa, Russia, India, North Korea, Pakistan, Turkenistan
6		Chinese Mainland

Note:Some of the function works subject to the types of DVD discs. The disc may not.Support the function or need special setting.

DVD Explanations

Information about Discs

Type	Icon	Content	Size	Capacity
DVD		Video+audio (dynamic image)	12cm	About 133min (one layer on one side) About 242min (one layer on one side) About 266min (one layer on both side) About 484min (one layer on both side)
VCD		Video+audio (dynamic image)	12cm	About 74 min
Mp3		Audio	12cm	About 600 min

The software maker limit some operation of playing VCD disc, please refer enclosed disc operation explanations.

The unit will play CD, SVCD, MP3 & Picture CD(JPEG Format) which are recorded on CD-R or CD-RW. Some CD-R or CD-RW may play due to its file format compatibility.

Disc Protection

Do not touch the shining part of disc with you bare hands. Do not stick paper or tape on the disc.



Disc Maintenance

Keep the disc away from Magnetic materials, heat or direct sunlight. Do not expose disc to moisture and dust environments.

Disc cleaning


Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with soft cloth. Wipe the disc from the center out.



Functions and Features


- 9.2 inch / 15 inch Roof mounting TFT LCD monitor with DVD PLAYER
- 9.2 inch, 16:9 modes / 15 inch, 4:3 modes
- Digital technology, clear picture with no interference
- Compatible to DVD/VCD/CD/MP3/CD-R/JPEG formats
- FM transmission Frequency range: FM87.7MHz / FM87.9MHz / FM88.1MHz / FM88.3MHz / FM88.5MHz / FM88.7MHz / FM88.9MHz / FM89.1MHz.
- 1 Audio & 1 Video inputs
- 1 Audio & 1 Video outputs

Connections

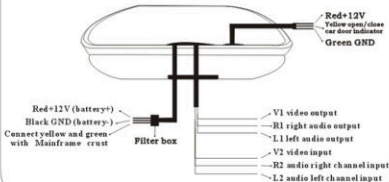

Basic operation and connection method

9.2 inch

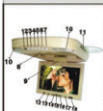


1. DVD remote window
2. DVD power on/off
3. Entrance button
4. Play/pause
5. Stop
6. Previous
7. Next
8. Unlock button
9. Light on/off
10. Light
11. Disc entrance
12. display power on/off
13. display menu
14. down-
15. display remote window
16. up+
17. V1/V2
18. IR window

15 inch



1. DVD power on/off
2. Entrance button
3. Play/pause
4. DVD remote window
5. Stop
6. Unlock button
7. Previous
8. Next
9. Light
10. Light on/off
11. display remote window
12. display power on/off
13. IR window


Remote control information

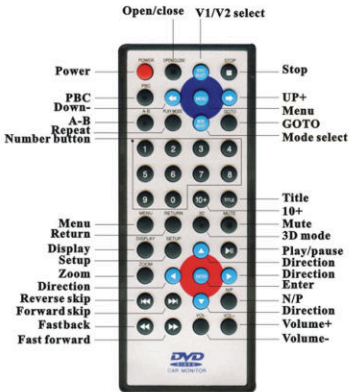

☒ Note:some function may not work for different disc formats.



Remote control battery installation

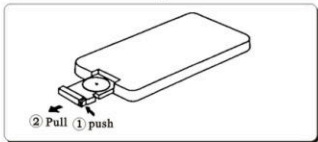

Notes:

1. Direct the control to the window of infrared receiver of the unit.
2. Do not press, drop and disassemble the remote control.
3. Press and hold button for about two seconds.
4. Commonly, the life of battery is about one year, always use new battery to replace the old battery set.
5. Please take out the battery when not using for a long time.



Disc operation explanations

How to insert a disc?

1. Make sure the installation of the DVD player and all its cables are properly connected.
2. Press power button to switch on, place the disc, with the logo side upwards. Insert the disc into the DVD deck; A few seconds later, the DVD player will load the disc automatically.

(As shown in the right illustration)



Turn on/off the unit (POWER)

Please adjust this monitor to the best view angle when you first use it, and then press the POWER button on the remote control to turn on the unit. Press again to turn off.

 



Play/Pause (PLAY)

1. The unit turns on after connecting with power. Press PLAY to play
2. The NO DISC indicates the disc with wrong placement, no disc or disc damaged.
3. When the unit is playing, Press the PLAY button to Pause, press again to continue.

Stop

Press STOP button will stop broadcasting the appearance, then press the PLAY button to play from the first track. Press STOP twice continually the appearance will be off, Press PLAY to start from the beginning.


Fast forward, fast back (▶▶ ◀◀)

1. Press FAST FORWARD button continually, the playing mode will cycle within  2X, 4X, 8X, 16X, 32X and normal play (for DVD disc).
2. The playing mode will cycle within  2X, 4X, 8X, 16X, 32X and normal play (for other disc).
3. Press FAST BACK button continually, the playing mode will cycle within  2X, 4X, 8X, 16X, 32X and normal play (for DVD disc).
4. The playing mode will cycle within  2X, 4X, 8X, 16X, 32X and normal play.

Last previous/Next (◀◀ ▶▶)


1. Press ▶▶ button to choose the next chapter.
2. Press ◀◀ button to choose the previous chapter.

Title Menu function (MENU)

When plays DVD, press MENU to enter the TITLE MENU, the items for choice will display on screen. Press direction key  to choose, then press ENTER to confirm. MENU button means Return when playing (it is effective when PBC ON).


PBC button (Program backward control)

1. Must return to the main menu to select TITLE, chapter or song, when PBC ON.
2. When PBC OFF, you can select TITLE, chapter or song when playing or stop.

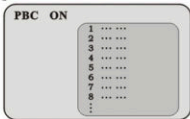

Magnifying function (ZOOM).

The image magnify with 2,3,4,1/2,1/3,1/4 times if press this button one to six times, press again to play normally without zoom.
(While Mp3 or CD is playing, it is not functional.)

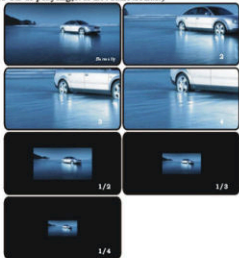

ROOF MOUNTING TFT LCD WITH DVD PLAYER

Slow playing

Press the **▶|** button in the state of playing, machine plays slowly by four varied speed.(**▶|** 1/2,1/4,1/8,1/16)for DVD disc. Press the **▶▶** to return to normal state.

☒ This button is not available for MP3 or CD plays.

Slow back

Press the **▶|** button in the state of playing, machine plays back slowly by four varied speed.(**◀|** 1/2,1/4,1/8,1/16)for DVD disc. Press the **◀◀** to return to normal state.

☒ This button is not available for MP3 or CD plays.

Single step play

Press the **▶|** button to pause in the state of playing, press **▶▶|** to play step by step, press **◀◀** to play back step by step, press **▶|** to return to normal state.

 
☒ This button may not work for MP3 or CD plays.

Repeat function(PLAY MODE)

- ⊗ When plays VCD or CD, when the PBC switch off, Press **PLAY MODE** button once, playing shifts:REP-ONE, REP-ALL and REPEAT OFF.
- ⊗ When plays MP3, press **PLAY MODE** button once, playing shifts:play around, randomized chapter play, title repeat, rep-all and repeat off.
- ⊗ When plays DVD, press **PLAY MODE** button once, playing shifts:CHAPTER REPEAT ON, TITLE REPEAT, REP-ALL and REPEAT OFF.
- ⊗ Special chapter repeat: when play disc, press **: A-B** at first time to setup starting point A, press **A-B** again to setup end-point B. And the repeat sequence begins. press **A-B** to cancel the sequence.


TITLE SELECT

In GOTO menu, Press direction key **▲ ▼** button to select title ,then press **ENTER** . If there are 15 titles, using number key to input title number 05,then it start to play title 5.



CHAPTER SELECT

 In GOTO menu, Press direction key ▲ ▼ button to select chapter , then press ENTER. Using number key to input chapter number , then it start to play .



Language SELECT

 
In GOTO menu, Press direction key ▲ ▼ button to select language , then press ENTER to language menu. Using direction key ▲ ▼ to select audio language output, and then press ENTER to play.

SUBTITLE SELECT

In GOTO menu, select SUBTITLE ,then press ENTER to caption menu. using direction key ▲ ▼ to select different SUBTITLE ,then press ENTER to display selected SUBTITLE.

Angle shift

In GOTO menu, select ANGLE while playing picture with different angles. Then press ENTER to angle option, using numeral key input angle number, then start to play with selected angle.



Time search

The Time search function allows you to start playing at any chosen time on the disc. For example, the unit play title 1 of DVD from one hour 5 minute, press direction key ► to select TITLE TIME press ENTER to title time option, using number key input 1,05,00(1:05:00),then it start to play from chosen time.



REPEAT

In GOTO menu, select REPEAT, then press ENTER to repeat menu. Using direction key ▲ ▼ to select chapter repeat, title repeat, repeat-all and off. Then press ENTER to play.

Elapsed time display

Elapsed time or remain time of title or chapter can be shown in GOTO menu. press direction key ▲ ▼ to select time display, press ENTER to time display menu, Using direction key ▲ ▼ to select title elapsed, title remain, chapter elapsed, chapter remain, press ENTER to see relevant time.

Volume control


Press VOL- to decrease volume, press VOL+ to increase volume.



DVD disc menu

Title menu and chapter menu in some DVD disc. It display menu on screen while playing, using direction key to select.

- ⊗ Press MENU, title menu will be display on screen.

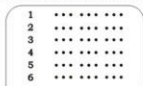

- ⊗ Press direction key to select, press ENTER to play.



 
- ⊗ Or press number key to select, then it start to play.





VCD

While playing VCD and VCD 2.0 with PBC (Play back control) function, it may appear menu on screen, using remote to switch on or off PBC function.

- ⊗ Press PBC, following display appear on screen:





- ⊗ PBC is on: disc menu display appears on screen, using   to page up and down if there are many options.



- ⊗ Press number key to select song.



- ⊗ PBC is off: if there is no disc menu display while playing, it play full disc in turn. using  or  to select song forward or back, or using number key to select directly.


ROOF MOUNTING TFT LCD WITH DVD PLAYER

CD


Use **◀** or **▶** to select song forward or back ,or use number key to select directly while playing CD.

Mp3

 ⊗ When you play MP3, following display appear on screen:



 
⊗ Press direction key **▲▼** to select content, press **ENTER** to enter. For example: Press direction key **▲▼** to select content, press **ENTER** to enter, following display content 1 appear on screen:



⊗ Press direction key **▲▼** to select song, press **ENTER** to play. Press **■** to stop, if press **ENTER** at once to play from the beginning, press direction key **◀** to return content menu.

Play DVD disc

 Press **3D** , following display appear on screen:



Language selection

Use **TITLE** to select one language to display on screen while playing DVD disc Which has several languages.

For example: four languages in DVD disc, press **TITLE** , following display appear on screen:



Title	1 / 4	Chinese
Title	2 / 4	English
Title	3 / 4	France
Title	4 / 4	Germany
Title	Cancel	



DVD system operations explanations

Main menu setup

According to disc type, content and personal like, you can do setting of subtitle, display mode, contrast, disc grade control, digital output, audio output, post DRC and speaker type.

Press **SETUP** , main menu display appear on screen, press direction key ◀ ▶ to select different option.

- ⊕ Press **SETUP** to exit.

-- General setting page --

TV display	Mail
Angle mark	On
OSD lang	Chinese
Subtitle	Off
Screen saver	On
Last Merry	On

General setting page

General setting page

Pop-up following menu display on screen while selecting **TV DISPLAY** in general setting page, press direction key **▲ ▼** to select best image.


-- General setting page --

TV display	Mail	Normal/PS
Angle mark	On	Normal/LB
OSD lang	Chinese	Wide
Subtitle	Off	
Screen saver	On	
Last Merry	On	

Setting

Display mode

- ⊗ Select **Normal/PS** : displaying wide image in normal size monitor, left and right fringe of image will be removal.
- ⊗ Select **Normal/LB** : displaying wide image in normal size monitor, black mark will be appeared on the top and bottom of screen.
- ⊗ Select **WIDE** : fit for wide screen monitor.

 While playing DVD disc, the image you saw may be different from the setting because of different disc recording. Please select again.

Angle mark

- ⊗ Select **on** , while playing DVD disc with multi-angle, angle mark display on screen.
- ⊗ Select **OFF** , no angle mark.

OSD Language

- ⊗ Select **ENGLISH** , English character display on screen.
- ⊗ Select **CHINESE** , Chinese character display on screen.

HIDDEN SUBTITLE SELECTION

- ⊗ Select **ON** , while playing hidden subtitle disc, hidden subtitle display on screen.
- ⊗ Select **OFF** , while playing hidden subtitle disc, no hidden subtitle display on screen.

Screen saver

- ⊕ Select **ON** , no operate unit in certain time, for the safety of screen, dynamic image will be display on screen automatically.
- ⊕ Select **OFF** , screen saver be off.

Last memory setting

- ⊕ Select **ON** , this players memorizes the last condition for the disc. The latest stop position is automatically recalled
- ⊕ Select **OFF** , memory function be off.

Audio setting page

After general setting, press direction key **◀** to return main setting menu, press direction key **▶** to select audio setting page, Press **ENTER** or direction key **▼** to enter audio setting page. Following display:

-- Audio setting page --

Speaker setup
Spdif setup
Dolby Digital Setup
Channel Delay
Equalizer
3D processily
HDCD

Go to Audio setting page

Speaker setup

Move direction key **▲▼** to select [speaker setup], press **ENTER** to enter speaker setting menu, press direction key **▲▼** to select downmix, front speaker, center speaker, rear speaker, subwoofer, test tone, dialog or post DRC.

-- Speaker setup --

Downmix	LT/RT	LT/RT
Front speaker	Large	Stereo
Center speaker	Small	V svrr
Rear speaker	Small	off
Subwoofer	On	
Test tone	off	
Dialog	00	
Post DRC	Auto	

Setting Downmix mode

Downmix selection

- ⊗ Select **LT/RT** , indicating audio left/right channel to play.
- ⊗ Select **STEREO** , indicating stereo audio output.
- ⊗ Select **V SURR** , indicating V SURR signal audio output.

If channel 2 signal access to amplifier, you can select **LT/RT** to input channel 2 in amplifiers for postposition.

Front speaker selection

Select **LARGE, SMALL** .

Subwoofer selection

Select **ON, OFF** , **ON** means subwoofer speaker is on.

Post DRC selection

Decrease volume and make sound effect within maximum range of speaker output. option is: **on, off, auto** .

SPDIF setting page

Moving direction key **▲ ▼** select [SPDIF SETTING PAGE] in audio setting page, press **ENTER** to enter digital audio setting page menu , press direction key **▲ ▼** to select SPDIF output, CD, dolby digital , DTS, MPEG, LPCM output.

-- Digital audio setting page--

SPDIF output	Digital audio	Off
CD	Digital audio	RAW
dolby digital	SPDIF/PCM	
DTS	Manual	
MPEG		
LPCM output		

SPDIF setting

SPDIF output

- ⊗ Select **OFF** , SPDIF is off.
- ⊗ Select **RAW** , SPDIF is not decoded yet.
- ⊗ Select **PCM** , decode function of PCM and Dolby digital should be in amplifier.
- ⊗ Select **Manual** , you can personalize TITLE output setting.

CD selection

After Selecting manual in SPDIF OUTPUT ,select [SPDIF OFF, SPDIF RAW, SPDIF/PCM in CD menu.

Dolby digital selection

After Selecting manual in SPDIF OUTPUT ,select SPDIF OFF, SPDIF RAW, SPDIF/PCM in Dolby digital menu.

DTS selection

After Selecting MANUAL in SPDIF OUTPUT ,select SPDIF RAW, SPDIF/PCM in DTS menu.

PCM channel selection

After Selecting MANUAL in SPDIF OUTPUT ,select SPDIF L/R , SPDIF L/R stereo, SPDIF center/sub woof in PCM channel menu.

MPEG selection

After Selecting MANUAL in DIGITALAUDIO OUTPUT ,select DIGITALAUDIO OFF, DIGITALAUDIO RAW, SPDIF/PCM in MPEG menu.

LPCM OUT selection

Select LPCM sampling frequency.

Dolby digital setting

Press direction key ◀ to return audio setting page, moving direction key ▲ ▼ in audio setting page to select\

Dolby digital setting ,press ENTER to enter Dolby setting page menu. press direction key ▲ ▼ to select L+R,Dynamic .





-- Dolby digital setting page --

L+R	Stereo	Stereo
Dynamic		L-mono
		R-mono
		Mix-mono

L+R setting

ROOF MOUNTING TFT LCD WITH DVD PLAYER

L+R selection

-  Select **STEREO** : means stereo signal output.
-  Select **L-MONO** : means L-mono signal output.
-  Select **R-MONO** : means R-mono signal output.
-  Select **MIX-MONO** : means average signal of L+R channel signal.

Dynamic selection

Select **DYNAMIC** in **DOLBY DIGITAL SETTING PAGE** , pressing **ENTER** and using direction key **▲ ▼** to do setting. The setting is functional only for Dolby digital audio raw.

Equalizer setting

Press direction key **◀** to return audio setting page menu, moving direction key **▲ ▼** to select **EQUALIZER SETTING PAGE** , pressing **ENTER** and using direction key **▲ ▼** to select **EQ TYPE, BASS BOOST, SUPER BASS, TREBLE BOOST** .

-- Equalizer setting page --

Eq type	None	None
Bass boost	Off	Rock
Super bass	Off	POP
Treble boost	Off	Live
		Dance
		Techno
		Classic
		Soft

None

EQ TYPE SELECTION

To get better sound effect, according to different music style and select **NONE, ROCK, POP, LIVE, DANCE, TECHNO, CLASSIC, SOFI** on **EQ TYPE** .

BASS BOOST, SUPER BASS, TREBLE BOOST SELECTION

Select **ON** to boost relevant audio.

3D process setting page

Press direction key **◀** to return audio setting page, moving direction **\Key ▲ ▼** to select 3D process setting page , pressing **ENTER** and using direction key **▲ ▼** to select **PRO logicII, REVERB mode** .

-- 3D process setting page--

RPO LogicII	Off
Reverb mode	Off
	Concert
	Living Room
	Hall
	Bathroom
	Cave
	Arena
	Church

Reverb mode

 **Reverb mode selection**

In **AUDIO SETTING PAGE** menu, use direction key **▲ ▼** and move cursor to select **3D PROCESS**, press **ENTER** to enter in **3D process setting page**, then do setting in **REVERB MODE**.

-- 3D process setting page--

RPO LogicII	Off
Reverb mode	Off
	Concert
	Living Room
	Hall
	Bathroom
	Cave
	Arena
	Church

Reverb mode

 **HDCD setting**

Press direction key **◀** to return audio setting page, moving direction key **▲ ▼** to select **HDCD setting page**, press **ENTER** to enter in **HDCD setting page menu**, then press direction key **▶** to enter into right submenu.

-- HDCD setting --

Filter	44.1K	Off
		44.1K
		88.2K

Filter

Filter selection

In AUDIO SETTING PAGE , using direction key ▲▼ and moving cursor to select HDCD ,press ENTER to enter HDCD process setting page].selecting relevant sampling frequency to filter.

- ⊗ OFF means using CD formats.

Video setting page

After audio setting, press direction key ◀ to return main setting menu, press direction key ▶ to select video setting page,press ENTER or direction key ▼ to enter video setting page menu , press direction key ▲▼ to select VIDEO,QUALITY .press ENTER to select VIDEO ,press direction key ▲▼ to select OFF,YUV,RGB .Press ENTER to confirm.

-- Video setting page--

Component	Off	Off
TV mode		YUV
Quality		RGB

Component

Video output mode

Select YUV means YUV signal output, select RGB means RGB signal output, select OFF means compound video output.

Compound video output option is default in this machine

- Do not try to use YUV and RGB signal output, otherwise no display appear on screen and cannot be recovered.

Quality

- ⊗ Press direction key ◀ to return main setting menu, press direction Key ▲▼ to select QUALITY SETTING ,press ENTER to confirm.
- ⊗ In video setting page menu, Using direction key ▲▼ to select quality and press ENTER to enter quality setting menu and do setting (CHARPNESS,BRIGHTNESS,CONTRAST,GAMMA,HUE, SATURATION LUMA DELAY).

-- Quality --

Sharpness	High	High
Brightness	00	Medium
Contrast	00	Low
Gamma	None	
Hue	00	
Saturation	00	
Luma delay	1T	

High

SHARPNESS selection

Select HIGH, MEDIUM, LOW to adjust image sharpness.
Select LOW to watch soft image.

Brightness and contrast selection

According to environment and personal like,
you can adjust brightness.

In brightness or contrast menu, Press direction key ► to setting
menu and use direction key ▲ ▼ to do setting.
Press ENTER to return previous menu.

Gamma adjusting

Adjust Gamma to High, medium, low, none .
None indicates no Gamma adjusting.

Hue and Saturation selection

According to environment and personal like, you can adjust Hue
and saturation.

Luma delay selection

- ⊕ Set 0T, 1T to different monitor. normally, set 1T to DVD ,
set 0T to others.
- ⊕ While selecting BRIGHTNESS, CONTRAST, HUE, SATURATION ,
press ENTER to pop-up following menu.

BRIGHTNESS 0

Press direction key ◀ ► to adjust
brightness, contrast, hue and saturation,
press ENTER to confirm and return
previous menu. Press SETUP to exit.

Change setting according to select different options.

Preference page

Press **STOP** twice During completely stop and press **SETUP** to enter main setting menu, press direction key **▶** to select **PREFERENCE PAGE**, press **ENTER** or direction key **▼** to enter preference page, press direction key **▲▼** to select **DISPLAY MODE, PBC, AUDIO, SUBTITLE, DISC MENU, PARENTAL, COUNTRY/REGION, DEFAULT**.
Moving direction key **▲▼** to select different option in preference Page. Press direction key **▶** to enter.

-- Video setting page --

Display mode	Multi	PAL
PBC	On	Multi
Audio	ENG	NTSC
Subtitle	ENG	
Disc menu	ENG	
Parental		
Country/region	ENG	
Default		

Setting TV TYPE

Display mode

Select **PAL MULTI, NTSC** in **TV TYPE**.

PBC

Set **Playback Control (PBC)** to **On** or **Off**. **On** : indicates playback control allowed, **off** indicates playback control not allowed.

Audio language

Select different language **ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE** on the disc

Subtitle

Select different subtitle **ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE** on the disc

Disc language selection

Select display language before playing disc:
ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE.

Parental

Set OFF to PASSWORD MODE on password setting page menu, select different level control in PARENTAL, the same level as American movie .finished setting, return to password setting page menu and reset ON to PASSWORD MODE .

Country / region


Different country has different parental setting on the disc, select country/region including CHINA, FRANCE, HONGKONG, JAPAN, TAIWAN, ENGLISH, U.S.A to play the disc.

Defaults

Select DEFAULT, to restore original factory setting.

Password setting page

- ⊕ After VIDEO SETTING PAGE , press direction key ◀ to return Mainsetting menu, press direction key ▶ to select PASSWORD SETTING PAGE menu, press ENTER or direction Key ▼ to enter password setting page menu. Press direction Key ▲ ▼ to select password mode.
- ⊕ Move direction key ▲ ▼ to select PASSWORD and press direction key ▶ enter, then press ENTER to password change.

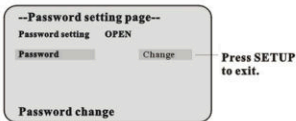

ROOF MOUNTING TFT LCD WITH DVD PLAYER

- ⊗ Press ENTER to password change, following menu display appears on screen:

Old password

New password

Password

⊗ Password change

- ⊗ Initial password: no initial password. You can set your own password.
- ⊗ Operating as following:
Press number key to input new password Input new password again and confirm Press ENTER to return password setting page.
Password change completed.





Troubleshooting

Symptom	Cause and solution
The player does not work. or no disc	<ol style="list-style-type: none">1.Insert the disc or not2.Check the disc is placed up side down or not, Place the disc with the playback sidedown.3.The disc is dirty. clean the disc4.The regional code of disc and unit are different. check the regional code. <p>The unit is moisture inside, take off the disc and power off unit for about 1 hour.</p>
No sound	<ol style="list-style-type: none">1.Check the audio cables are connected or not.2. The power code is connected or not.3. The Digital Audio Output is set to the wrong position. Set the Digital Audio Output to the correct position4. The disc is dirty. clean the disc
No Picture	<ol style="list-style-type: none">1.The monitor is on or off2.Video output is connected securely or not.
The picture is poor	<ol style="list-style-type: none">1.Signal system is not set properly. Check and set again
The DVD player does not work properly, start playback continually	<ol style="list-style-type: none">1.Check play on A-B repeat state or not. To cancel repeat sequence, press A-B button again.2.the disc is dirty, clean the disc or press GOTO to skip.
The remote control does not work properly.	<ol style="list-style-type: none">1.There is an obstacle in the path of the remote control and this unit. Remove the obstacle.2.Check if remote point to receiver or not3.Check if battery is fixed properly4.The batteries in the remote control are exhausted. Replace the batteries with new ones.

Thank you for using



☒ **Notes: the unit may not be work properly due to static or other interference. In such case, you disconnect the power cord and Plug the power cord into the wall outlet securely again to reset unit. If still not work, please inform our factory or nearest dealers.**

Notice to customers

-  Please operate as per instruction manual before using.
-  The unit is comprised of many precision electronic components. Pay attention to protect against moisture.
-  Prevent the hard object from scratching LCD screen.
-  High voltage inside! Non-technical authorized person is not allowed to dismantle the unit.

Notes:

For your safety, please power off display while driving.

 Thank you for using 

Product instruction manual



DVD
VIDEO
CAR MONITOR

CAR TFT LCD COLOR MONITOR SYSTEM