

# Product instruction manual



**CAR TFT LCD COLOR MONITOR SYSTEM**



**CAR TFT LCD COLOR MONITOR SYSTEM**



10.2inch



15 inch

## **Guarantee card**

- 1、 We provide free service under our guarantee within one year from the date of purchase. Service shall not be liable for a product if there is any incidental or consequential damages or inability to be used the product.
- 2、 If there is any incidental or consequential damages or inability to be use the product. Within guarantee date, we provide after-sales service and charge some component fee.
- 3、 If any quality problems happen within guarantee date, user can bring guarantee card (only valid with dealer's cachet) to any authorized dealers asking for repair.
- 4、 After guarantee date, we provide charge service.

**User name:**

**date of purchase:**

**Contact phone number:**

**post code:**

**Address:**



**Product type:**





**Dealer cachet:**

**Dealer's telephone:**

**Blank Above should be filled in by user and authorized dealers in detailed. user hold this card and get after-sales services.**



**Make sure to read instruction before using.**

 Notice to customers 

-  Please operate as per instruction manual before using.
-  The unit is comprised of many precision electronic components. Pay attention to protect against moisture.
-  Prevent the hard object from scratching LCD screen.
-  High voltage inside! Non-technical authorized person is not allowed to dismantle the unit.

**Notes:**

For your safety, please power off display while driving.

 Thank you for using 

## Precautions

- 1.To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Do not try to repair the unit by yourself. Please power off immediately in case of any problems and then inform our factory or nearest dealers. The product is comprised of many precision electronic components. Self-renovation or disassembling may cause malfunction to the device.
- 2.Do not expose this product to moisture, dust, vapor, oil smog, direct sun shine or influential environment.
- 3.Do not use the diluents or other chemical detergents. Use soft cloth to remove dust or dirt on the unit.
- 4.Keep the unit away from the over heat or over cold locations. the unit's storage temperature ranges from -30℃--70℃,and its operation temperature ranges from -10℃--55℃.
- 5.Do not play incompatible discs. This unit can play DVD/VCD/CD/MP3 & CD-R discs.
- 6.Avoid dropping or impact to the unit.
- 7.For your safety, do not turn on, watch or operate the unit while driving. In some countries and regions, it may be against the laws.
- 8.Safe power supply: DC 12V (10V-14V).

• **Note** •

LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicate defects or faults.

## Contents

Precautions .....	1
Contents .....	2
Disc explanation .....	3
Disc information .....	4
Functions and features .....	4
Connections .....	5
Basic operation explanations .....	5
Remote control .....	6
Assembly of remote control battery .....	7
Disc operation explanations .....	7
Operations with DVD .....	15
Troubles shooting .....	27
Guarantee card	

### Note

Design and specifications are subject to change without notice.

## Troubles shooting

Symptom	Cause and solution
The player does not work, or no disc	<ol style="list-style-type: none"> <li>1.Insert the disc or not</li> <li>2.Check the disc is placed up side down or not, Place the disc with the playback sidedown.</li> <li>3.The disc is dirty, clean the disc</li> <li>4.The regional code of disc and unit are different, check the regional code.</li> </ol> <p>The unit is moisture inside, take off the disc and power off unit for about 1 hour.</p>
No sound	<ol style="list-style-type: none"> <li>1.Check the audio cables are connected or not.</li> <li>2. The power code is connected or not.</li> <li>3. The Digital Audio Output is set to the wrong position. Set the Digital Audio Output to the correct position</li> <li>4. The disc is dirty, clean the disc</li> </ol>
No Picture	<ol style="list-style-type: none"> <li>1.The monitor is on or off</li> <li>2.Video output is connected securely or not.</li> </ol>
The picture is poor	<ol style="list-style-type: none"> <li>1. Signal system is not set properly. Check and set again</li> </ol>
The DVD player does not work properly, start playback continually	<ol style="list-style-type: none"> <li>1.Check play on A-B repeat state or not. To cancel repeat sequence, press A-B button again.</li> <li>2.the disc is dirty, clean the disc or press GOTO to skip.</li> </ol>
The remote control does not work properly.	<ol style="list-style-type: none"> <li>1.There is an obstacle in the path of the remote control and this unit. Remove the obstacle.</li> <li>2.Check if remote point to receiver or not</li> <li>3.Check if battery is fixed properly</li> <li>4.The batteries in the remote control are exhausted. Replace the batteries with new ones.</li> </ol>

Thank you for using

☒ Notes: the unit may not be work properly due to static or other interference. In such case, you disconnect the power cord and Plug the power cord into the wall outlet securely again to reset unit. If still not work, please inform our factory or nearest dealers.

## ROOF MOUNTING TFT LCD WITH DVD PLAYER

- ⊗ Press ENTER to password change, following menu display appears on screen:

Old password	██████████
New password	██████████
Password	██████████
<b>Confirm</b>	

### ⊗ Password change

- ⊗ **Initial password: no initial password. You can set your own password.**
- ⊗ **Operating as following:**  
Press number key to input new password Input new password again and confirm Press ENTER to return password setting page.  
Password change completed.

## Compatible with DVD/VCD/CD/MP3/CD-R/CD-RW

### Choosing guide for disc



- ∨ DVDdisc and DVD player both have own world region code, DVD player only play the correspondwing DVD disc with same code.
- ∨ Enclosed are DVD disc code sheet:

Region code	Country or region
1	U.S.A., Canada
2	Europe, Japan, middle East, South Africa
3	Includes Korea, HK and TaiWan , Southeast Asia
4	Australia, Kinneret, Mexico, New Zealand
5	Africa, Russia, India, North Korea, Pakistan, Turkenistan
6	Chinese Mainland

- ∨ Note: Some of the function works subject to the types of DVD discs. The disc may not support the function or need special setting.

### DVD Explanations

#### ∨ Information about Discs

Type	Icon	Content	Size	Capacity
DVD		Video+audio (dynamic image)	12cm	About 133min (one layer on one side)
				About 242min (one layer on one side)
				About 266min (one layer on both side)
				About 484min (one layer on both side)
VCD		Video+audio (dynamic image)	12cm	About 74 min
Mp3		Audio	12cm	About 600 min

- ∨ The software maker limit some operation of playing VCD disc, please refer enclosed disc operation explanations.
- ∨ The unit will play CD, SVCD, MP3 & Picture CD(JPEG Format) which are recorded on CD-R or CD-RW. Some CD-R or CD-RW may play due to its file format compatibility.

### Disc Protection

Do not touch the shining part of disc with you bare hands. Do not stick paper or tape on the disc.



### Disc Maintenance

Keep the disc away from Magnetic materials, heat or direct sunlight. Do not expose disc to moisture and dust environments.

### Disc cleaning

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with soft cloth. Wipe the disc from the center out.

### Functions and Features

- 10.2 inch / 15 inch Roof mounting TFT LCD monitor with DVD PLAYER
- 10.2 inch, 16:9 modes / 15 inch, 4:3 modes
- Digital technology, clear picture with no interference
- Compatible to DVD/VCD/CD/MP3/CD-R/JPEG formats
- FM transmission Frequency range: FM87.7MHz / FM87.9MHz / FM88.1MHz / FM88.3MHz / FM88.5MHz / FM88.7MHz / FM88.9MHz / FM89.1MHz.
- 1 Audio & 1 Video inputs
- 1 Audio & 1 Video outputs

### Parental

Set OFF to PASSWORD MODE on password setting page menu, select different level control in PARENTAL, the same level as American movie. finished setting, return to password setting page menu and reset ON to PASSWORD MODE.

### Country / region

 
Different country has different parental setting on the disc, select country/region including CHINA, FRANCE, HONGKONG, JAPAN, TAIWAN, ENGLISH, U.S.A to play the disc.

### Defaults

Select DEFAULT, to restore original factory setting.

### Password setting page

- After VIDEO SETTING PAGE, press direction key ◀ to return Mainsetting menu, press direction key ▶ to select PASSWORD SETTING PAGE menu, press ENTER or direction Key ▼ to enter password setting page menu. Press direction Key ▲▼ to select password mode.
- Move direction key ▲▼ to select PASSWORD and press direction key ▶ enter, then press ENTER to password change.

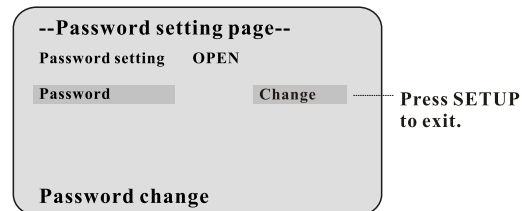

### Preference page

Press **STOP** twice During completely stop and press **SETUP** to enter main setting menu, press direction key **▶** to select **PREFERENCE PAGE**, press **ENTER** or direction key **▼** to enter preference page,press direction key **▲▼** to select **DISPLAY MODE, PBC,AUDIO,SUBTITLE,DISC MENU,PARENTAL, COUNTRY/REGION,DEFAULT** .

Moving direction key **▲▼** to select different option in preference Page.Press direction key **▶** to enter.

-- Video setting page --

Display mode	Multi	PAL
PBC	On	Multi
Audio	ENG	NTSC
Subtitle	ENG	
Disc menu	ENG	
Parental		
Country/region	ENG	
Default		

Setting TV TYPE

### Display mode

Select **PAL MULTI,NTSC** in **TV TYPE** .

### PBC

Set Playback Control (PBC) to On or Off. **On** : indicates playback control allowed, **off** indicates playback control not allowed.

### Audio language

Select different language **ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE** on the disc

 
### Subtitle

Select different subtitle **ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE** on the disc

### Disc language selection


Select display language before playing disc:  
**ENGLISH, FRANCE, SPANISH, CHINESE, JAPANESE** .

### Connections

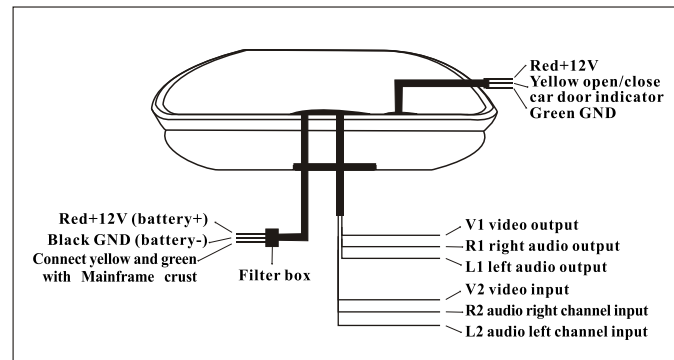


### Basic operation and connection method
 
#### 10.2 inch

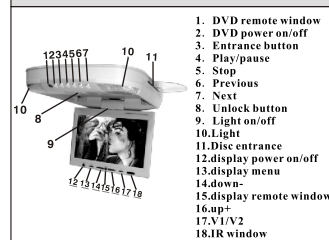

#### 15 inch

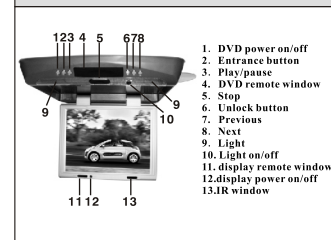 



**Filter selection**

In AUDIO SETTING PAGE , using direction key ▲▼ and moving cursor to select HDCD, press ENTER to enter HDCD process setting page].selecting relevant sampling frequency to filter.

⊗ OFF means using CD formats.

**Video setting page**

After audio setting, press direction key ◀to return main setting menu, press direction key ▶ to select video setting page,press ENTER or direction key ▼ to enter video setting page menu , press direction key ▲▼ to select VIDEO,QUALITY. press ENTER to select VIDEO, press direction key ▲▼ to select OFF ,YUV, RGB. Press ENTER to confirm.

**-- Video setting page--**

Component	Off	Off
TV mode		YUV
Quality		RGB

Component

**Video output mode**

Select YUV means YUV signal output, select RGB means RGB signal output, select OFF means compound video output. Compound video output option is default in this machine

 
⊗ Do not try to use YUV and RGB signal output, otherwise no display appear on screen and cannot be recovered.

**Quality**

- ⊗ Press direction key ◀ to return main setting menu, press direction Key ▲▼ to select QUALITY SETTING ,press ENTER to confirm.
- ⊗ In video setting page menu, Using direction key ▲▼ to select quality and press ENTER to enter quality setting menu and do setting (CHARPNESS,BRIGHTNESS,CONTRAST,GAMMA,HUE, SATURATION LUMA DELAY).



**Remote control battery installation**

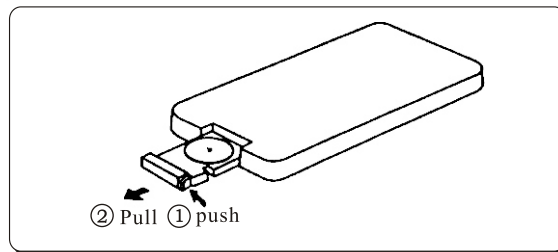

**Notes:**

- 1.Direct the control to the window of infrared receiver of the unit.
- 2.Do not press, drop and disassemble the remote control.
- 3.Press and hold button for about two seconds.
- 4.Commonly, the life of battery is about one year, always use new battery to replace the old battery set.
- 5.Please take out the battery when not using for a long time.



**Disc operation explanations**

**How to insert a disc?**

- 1.Make sure the installation of the DVD player and all its cables are properly connected.
- 2.Press power button to switch on, place the disc, with the logo side upwards.Insert the disc into the DVD deck; A few seconds later, the DVD player will load the disc automatically.

(As shown in the right illustration)



**Turn on/off the unit (POWER)**

Please adjust this monitor to the best view angle when you first use it, and then press the POWER button on the remote control to turn on the unit. Press again to turn off.

**Play/Pause (PLAY)**

1. The unit turns on after connecting with power. Press PLAY to play
2. The NO DISC indicates the disc with wrong placement, no disc or disc damaged.
3. When the unit is playing, Press the PLAY button to Pause, press again to continue.

**Stop**

Press STOP button will stop broadcasting the appearance, then press the PLAY button to play from the first track. Press STOP twice continually the appearance will be off, Press PLAY to start from the beginning.


**Fast forward, fast back (▶▶ ◀◀)**

1. Press FAST FORWARD button continually, the playing mode will cycle within ▶▶ 2X, 4X, 8X, 16X, 32X and normal play (for DVD disc).
2. The playing mode will cycle within ▶▶ 2X, 4X, 8X, 16X, 32X and normal play (for other disc).
3. Press FAST BACK button continually, the playing mode will cycle within ◀◀ 2X, 4X, 8X, 16X, 32X and normal play (for DVD disc).
4. The playing mode will cycle within ◀◀ 2X, 4X, 8X, 16X, 32X and normal play.

**Last previous/Next (◀◀ ▶▶)**

1. Press ▶▶ button to choose the next chapter.
2. Press ◀◀ button to choose the previous chapter.

**Title Menu function (MENU)**

When plays DVD, press MENU to enter the TITLE MENU, the items for choice will display on screen. Press direction key  to choose, then press ENTER to confirm. MENU button means Return when playing (it is effective when PBC ON).

-- 3D process setting page--

RPO LogicII	Off
Reverb mode	Off
	Concert
	Living Room
	Hall
	Bathroom
	Cave
	Arena
	Church

Reverb mode

**Reverb mode selection**

In AUDIO SETTING PAGE menu, use direction key ▲▼ and move cursor to select 3D PROCESS, press ENTER to enter in 3D process setting page, then do setting in REVERB MODE.

-- 3D process setting page--

RPO LogicII	Off
Reverb mode	Off
	Concert
	Living Room
	Hall
	Bathroom
	Cave
	Arena
	Church

Reverb mode

**HDCD setting**

Press direction key ◀ to return audio setting page, moving direction key ▲▼ to select HDCD setting page, press ENTER to enter in HDCD setting page menu, then press direction key ▶ to enter into right submenu.

-- HDCD setting --

Filter	44.1K	Off
		44.1K
		88.2K

Filter

**L+R selection**

 
- Select **STEREO** : means stereo signal output.
- Select **L-MONO** : means L-mono signal output.
- Select **R-MONO** : means R-mono signal output.
- Select **MIX-MONO** : means average signal of L+R channel signal.

**Dynamic selection**

Select **DYNAMIC** in **DOLBY DIGITAL SETTING PAGE** , pressing **ENTER** and using direction key **▲ ▼** to do setting. The setting is functional only for Dolby digital audio raw.

**Equalizer setting**

Press direction key **◀** to return audio setting page menu, moving direction key **▲ ▼** to select **EQUALIZER SETTING PAGE** , pressing **ENTER** and using direction key **▲ ▼** to select **EQ TYPE, BASS BOOST, SUPER BASS, TREBLE BOOST** .

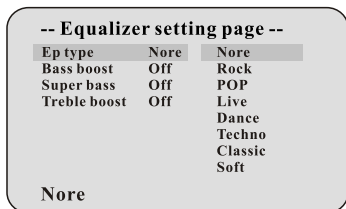

**EQ TYPE SELECTION**

To get better sound effect, according to different music style and select **NONE, ROCK, POP, LIVE, DANCE, TECHNO, CLASSIC, SOFT** on **EQ TYPE** .

**BASS BOOST, SUPER BASS, TREBLE BOOST SELECTION**

 
Select **ON** to boost relevant audio.

**3D process setting page**

Press direction key **◀** to return audio setting page, moving direction **\Key ▲ ▼** to select **3D process setting page** , pressing **ENTER** and using direction key **▲ ▼** to select **PRO logicII, REVERB mode** .


**PBC button (Program backward control)**

1. Must return to the main menu to select **TITLE, chapter or song**, when **PBC ON**.
2. When **PBC OFF**, you can select **TITLE, chapter or song** when playing or stop.

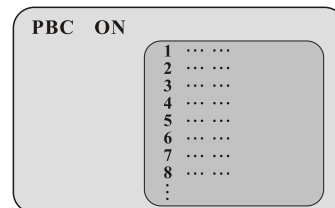

**Magnifying function (ZOOM).**

 The image magnify with **2,3,4,1/2,1/3,1/4** times if press this button **one to six times**, press again to play normally without zoom. (While Mp3 or CD is playing, it is not functional.)

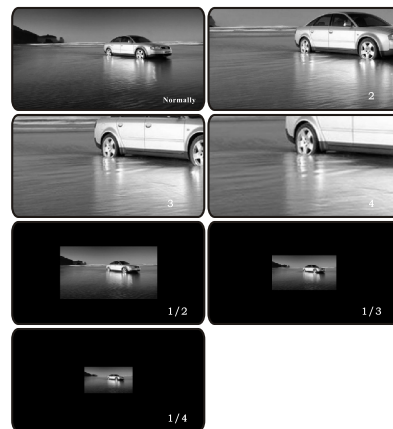

### Slow playing

Press the **▶||** button in the state of playing, machine plays slowly by four varied speed. (▶ 1/2, 1/4, 1/8, 1/16) for DVD disc. Press the **▶▶** to return to normal state.

☒ This button is not available for MP3 or CD plays.

### Slow back

Press the **▶||** button in the state of playing, machine plays back slowly by four varied speed. (◀ 1/2, 1/4, 1/8, 1/16) for DVD disc. Press the **◀◀** to return to normal state.

☒ This button is not available for MP3 or CD plays.

### Single step play

Press the **▶||** button to pause in the state of playing, press **▶▶** to play step by step, press **◀◀** to play back step by step, press **▶** to return to normal state.

 
☒ This button may not work for MP3 or CD plays.

### Repeat function (PLAY MODE)

- ⊗ When plays VCD or CD, when the PBC switch off, Press **PLAY MODE** button once, playing shifts: REP-ONE, REP-ALL and REPEAT OFF.
- ⊗ When plays MP3, press **PLAY MODE** button once, playing shifts: play around, randomized chapter play, title repeat, rep-all and repeat off.
- ⊗ When plays DVD, press **PLAY MODE** button once, playing shifts: CHAPTER REPEAT ON, TITLE REPEAT, REP-ALL and REPEAT OFF.
- ⊗ Special chapter repeat: when play disc, press : A-B at first time to setup starting point A, press A-B again to setup end-point B. And the repeat sequence begins. press A-B to cancel the sequence.

### TITLE SELECT

In GOTO menu, Press direction key **▲▼** button to select title, then press **ENTER**. If there are 15 titles, using number key to input title number 05, then it start to play title 5.



### CD selection

After Selecting **manual** in **SPDIF OUTPUT**, select [SPDIF OFF, SPDIF RAW, SPDIF/PCM in CD menu.

### Dolby digital selection

After Selecting **manual** in **SPDIF OUTPUT**, select **SPDIF OFF**, **SPDIF RAW**, **SPDIF/PCM** in **Dolby digital** menu.

### DTS selection

After Selecting **MANUAL** in **SPDIF OUTPUT**, select **SPDIF RAW**, **SPDIF/PCM** in **DTS** menu.

### PCM channel selection

After Selecting **MANUAL** in **SPDIF OUTPUT**, select **SPDIF L/R**, **SPDIF L/R stereo**, **SPDIF center/sub woof** in **PCM channel** menu.

### MPEG selection

After Selecting **MANUAL** in **DIGITAL AUDIO OUTPUT**, select **DIGITAL AUDIO OFF**, **DIGITAL AUDIO RAW**, **SPDIF/PCM** in **MPEG** menu.

### LPCM OUT selection

Select **LPCM** sampling frequency.

### Dolby digital setting

Press direction key **◀** to return audio setting page, moving direction key **▲▼** in audio setting page to select **Dolby digital setting**, press **ENTER** to enter **Dolby setting** page menu. press direction key **▲▼** to select **L+R, Dynamic**.

-- Dolby digital setting page --

L+R	Stereo	Stereo
Dgnamic		L-mano
		R-mono
		Mix-mano

L+R setting

### Downmix selection

- ⊗ Select **LT/RT** , indicating audio left/right channel to play.
- ⊗ Select **STEREO** , indicating stereo audio output.
- ⊗ Select **V SURR** , indicating V SURR signal audio output.

☑ If channel 2 signal access to amplifier, you can select **LT/RT** to input channel 2 in amplifiers for postposition.

### Front speaker selection

Select **LARGE, SMALL** .

### Subwoofer selection

Select **ON, OFF** , **ON** means subwoofer speaker is on.

### Post DRC selection

Decrease volume and make sound effect within maximum range of speaker output. option is: **on, off, auto** .

### SPDIF setting page

Moving direction key **▲ ▼** select [SPDIF SETTING PAGE] in audio setting page, press **ENTER** to enter digital audio setting page menu , press direction key **▲ ▼** to select SPDIF output, CD, dolby digital , DTS, MPEG, LPCM output.

#### -- Digital audio setting page--

SPDIF output	Digital audio	Off
CD	Digital audio	RAW
dolby digital	SPDIF/PCM	
DTS	Manual	
MPEG		
LPCM output		

#### SPDIF setting

### SPDIF output

- ⊗ Select **OFF** , SPDIF is off.
- ⊗ Select **RAW** , SPDIF is not decoded yet.
- ⊗ Select **PCM** , decode function of PCM and Dolby digital should be in amplifier.
- ⊗ Select **Manual** , you can personalize TITLE output setting.

### CHAPTER SELECT

In GOTO menu, Press direction key **▲ ▼** button to select chapter , then press **ENTER**. Using number key to input chapter number , then it start to play .

Chapter 03/12

Present Chapter Number Chapter on disc

### Language SELECT

In GOTO menu, Press direction key **▲ ▼** button to select language , then press **ENTER** to language menu. Using direction key **▲ ▼** to select audio language output, and then press **ENTER** to play.

### SUBTITLE SELECT

In GOTO menu, select **SUBTITLE** ,then press **ENTER** to caption menu. using direction key **▲ ▼** to select different SUBTITLE ,then press **ENTER** to display selected SUBTITLE.

### Angle shift

In GOTO menu, select **ANGLE** while playing picture with different angles. Then press **ENTER** to angle option, using numeral key input angle number, then start to play with selected angle.

Angle 2/4

Present selected Playing Angle Degree

### Time search

The Time search function allows you to start playing at any chosen time on the disc. For example, the unit play title 1 of DVD from one hour 5 minute, press direction key **▶** to select **TITLE TIME** press **ENTER** to title time option, using number key input 1,05,00(1:05:00),then it start to play from chosen time.

Time 1: 05: 00

Title playing time

**REPEAT**

 
In GOTO menu, select REPEAT, then press ENTER to repeat menu. Using direction key ▲ ▼ to select chapter repeat, title repeat, repeat-all and off. Then press ENTER to play.

**Elapsed time display**

Elapsed time or remain time of title or chapter can be shown in GOTO menu. press direction key ▲ ▼ to select time display, press ENTER to time display menu. Using direction key ▲ ▼ to select title elapsed, title remain, chapter elapsed, chapter remain, press ENTER to see relevant time.

**Volume control**   


Press VOL- to decrease volume, press VOL+ to increase volume.




**DVD disc menu** 

Title menu and chapter menu in some DVD disc. It display menu on screen while playing, using direction key to select.

 - ⊗ Press MENU, title menu will be display on screen.

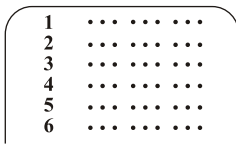

 - ⊗ Press direction key to select, press ENTER to play.

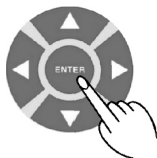

**Screen saver**

- ⊗ Select ON, no operate unit in certain time, for the safety of screen, dynamic image will be display on screen automatically.
- ⊗ Select OFF, screen saver be off.

**Last memory setting**

- ⊗ Select ON, this players memorizes the last condition for the disc. The latest stop position is automatically recalled
- ⊗ Select OFF, memory function be off.

**Audio setting page**

After general setting, press direction key ◀ to return main setting menu, press direction key ▶ to select audio setting page, Press ENTER or direction key ▼ to enter audio setting page. Following display:

-- Audio setting page --

- Speaker Setup
- Spdif Setup
- Dolby Digital Setup
- Channel Delay
- Equalizer
- 3D processily
- HDCD

Go to Audio setting page

**Speaker setup**

Move direction key ▲ ▼ to select [ speaker setup ], press ENTER to enter speaker setting menu, press direction key ▲ ▼ to select downmix, front speaker, center speaker, rear speaker, subwoofer, test tone, dialog or post DRC.

 
-- Speaker setup --

Downmix	SRT	LT/RT
Front speaker	Large	Stereo
Center speaker	Small	V SURR
Rear speaker	Small	off
Subwoofer	On	
Test tone	off	
Dialog	00	
Post DRC	Auto	

Setting Downmix mode

### General setting page

Pop-up following menu display on screen while selecting TV DISPLAY in general setting page, press direction key ▲ ▼ to select best image.

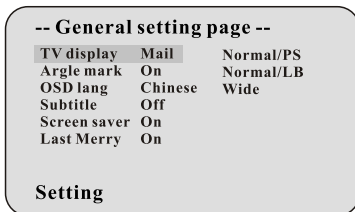

### Display mode

- Select Normal/PS : displaying wide image in normal size monitor, left and right fringe of image will be removal.
- Select Normal/LB : displaying wide image in normal size monitor, black mark will be appeared on the top and bottom of screen.
- Select WIDE : fit for wide screen monitor.

While playing DVD disc, the image you saw may be different from the setting because of different disc recording. Please select again.

### Angle mark

- Select on , while playing DVD disc with multi-angle, angle mark display on screen.
- Select OFF , no angle mark.

 
### OSD Language

- Select ENGLISH , English character display on screen.
- Select CHINESE , Chinese character display on screen.

### HIDDEN SUBTITLE SELECTION

- Select ON , while playing hidden subtitle disc, hidden subtitle display on screen.
- Select OFF , while playing hidden subtitle disc, no hidden subtitle display on screen.

- Or press number key to select, then it start to play.

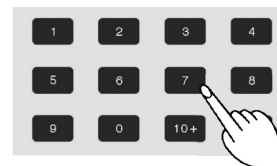


### VCD VCD

While playing VCD and VCD 2.0 with PBC (Play back control) function, it may appear menu on screen, using remote to switch on or off PBC function.

- Press PBC , following display appear on screen:



 - PBC is on: disc menu display appears on screen, using ◀▶ to page up and down if there are many options.



- Press number key to select song.



- PBC is off: if there is no disc menu display while playing, it play full disc in turn. using ◀◀ or ▶▶ to select song forward or back ,or using number key to select directly.


## ROOF MOUNTING TFT LCD WITH DVD PLAYER
 
### CD


Use **◀** or **▶** to select song forward or back, or use number key to select directly while playing CD.

### Mp3

When you play MP3, following display appear on screen:

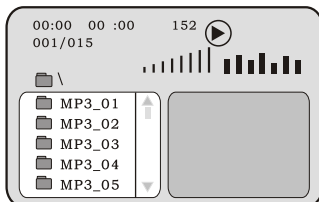

 
Press direction key **▲▼** to select content, press **ENTER** to enter. For example: Press direction key **▲▼** to select content, press **ENTER** to enter, following display content 1 appear on screen:

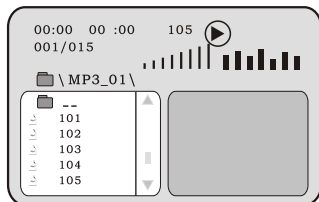

Press direction key **▲▼** to select song, press **ENTER** to play. Press **■** to stop, if press **ENTER** at once to play from the beginning, press direction key **◀** to return content menu.

### Play DVD disc

 
Press **3D**, following display appear on screen:



## Compatible with DVD/VCD/CD/MP3/CD-R/CD-RW

### Language selection

 Use **SUBTITLE** to select one language to display on screen while playing DVD disc Which has several languages. For example: four languages in DVD disc, press **SUBTITLE**, following display appear on screen:

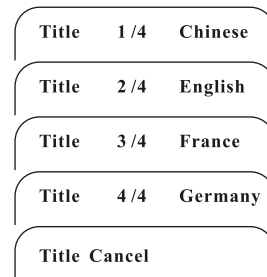

### DVD system operations explanations

#### Main menu setup

According to disc type, content and personal like, you can do setting of subtitle, display mode, contrast, disc grade control, digital output, audio output, post DRC and speaker type. Press **SETUP**, main menu display appear on screen, press direction key **◀▶** to select different option.

Press **SETUP** to exit.

#### -- General setting page --

TV display	Mail
Angle mark	On
OSD lang	Chinese
Subtitle	Off
Screen saver	On
Last Merry	On

#### General setting page